
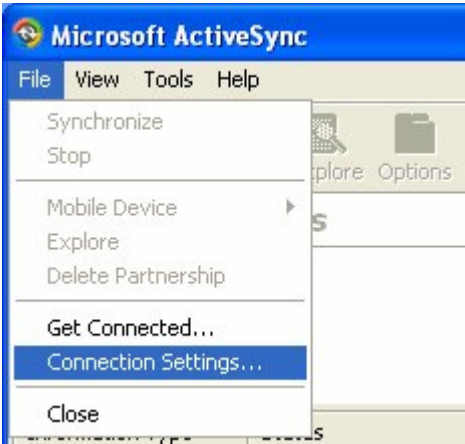
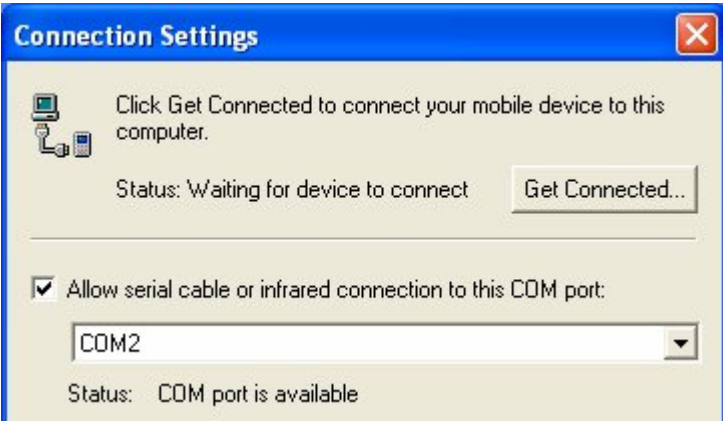
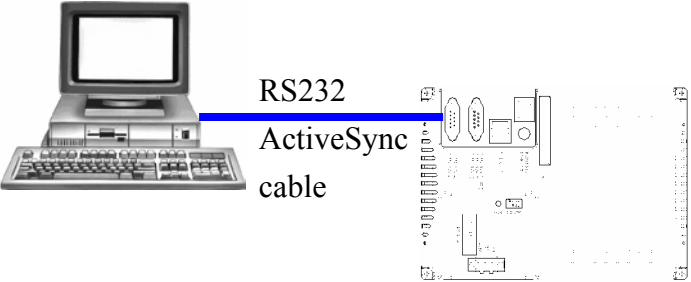
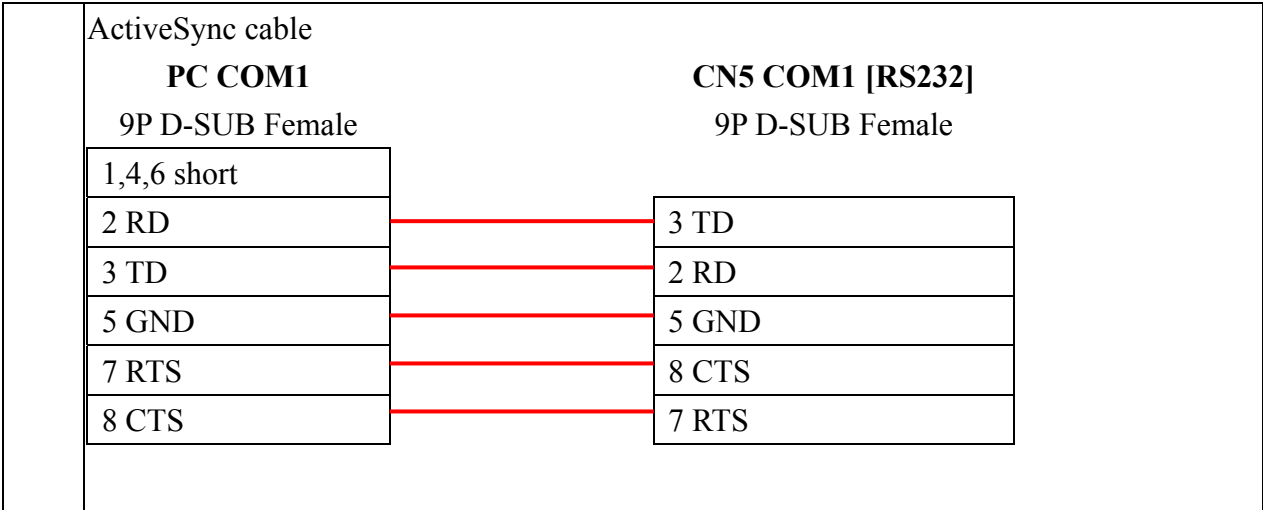


3.3.2 ActiveSync

The MT-606CV2 use the Com1 RS232 connect the PC

Step		
1	Make sure the Microsoft ActiveSync service is properly installed on the host PC.	 <p>Microsoft ActiveSync</p>
2	Click the “Connection Settings...”	
3	Allow serial cable or infrared connection to this COM port	
4	Connect the MT-606 Com1 RS232 and PC RS232 by the RS232 ActiveSync cable.	

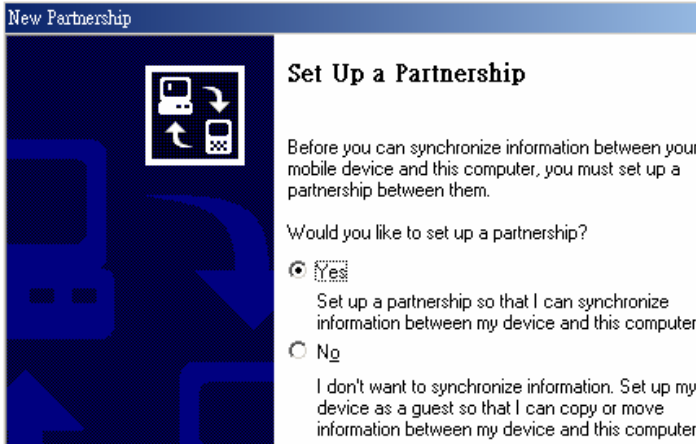
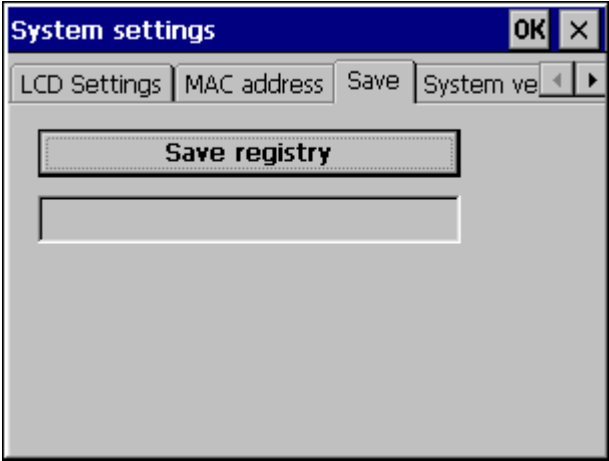
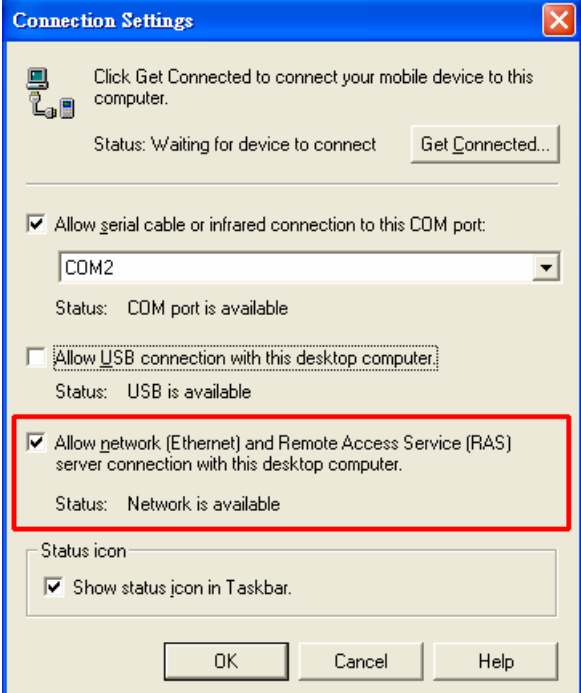


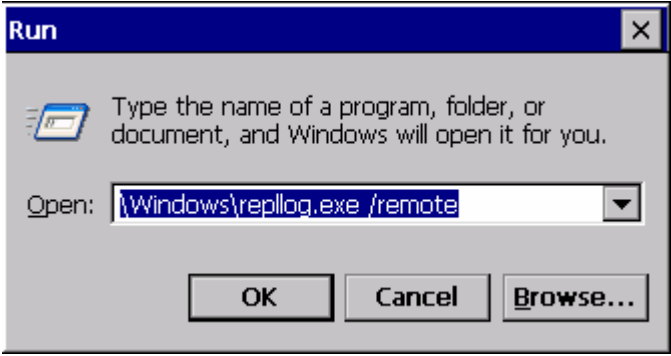
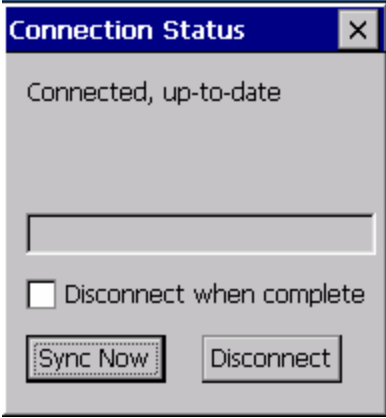
5	Run MT606 \\Windows\repllog.exe	
---	------------------------------------	--

6	Follow the onscreen instructions to establish a partnership and synchronize your MT606 with your desktop computer.	<p>New Partnership</p> <p>Set Up a Partnership</p> <p>Before you can synchronize information between your mobile device and this computer, you must set up a partnership between them.</p> <p>Would you like to set up a partnership?</p> <p><input checked="" type="radio"/> Yes</p> <p>Set up a partnership so that I can synchronize information between my device and this computer.</p> <p><input type="radio"/> No</p> <p>I don't want to synchronize information. Set up my device as a guest so that I can copy or move information between my device and this computer.</p>
---	--	--

7	Now you can synchronize the information between the MT606 and host computer with ActiveSync.	<p>Microsoft ActiveSync</p> <p>File View Tools Help</p> <p>Sync Stop Details Explore Options</p> <p>Guest</p> <p>Connected</p>
---	--	---

Use Ethernet connect to PC ActiveSync.

Step		
1	<p>Before you begin</p> <p>Set up a partnership, between your device and desktop computer using RS232 connection.</p>	
2	<p>MT606CV2 use CECP to save the registry. (The MT606CV2 will remember the partnership after the power reset.)</p> <p>Disconnect the RS232 cable</p>	
3	<p>Enable a network (Ethernet) connection in ActiveSync.</p> <p>1 On the File menu, click Connection Settings.</p> <p>2 Select Allow network (Ethernet) and Remote Access Service (RAS) server connection with this desktop computer.</p>	

4	<p>MT600 Run \Windows\repllog.exe /remote</p>	 <p>The screenshot shows a Windows 'Run' dialog box. The title bar is blue with the word 'Run' and a close button. Below the title bar, there is an instruction: 'Type the name of a program, folder, or document, and Windows will open it for you.' Below this is a text input field labeled 'Open:' containing the text '\Windows\repllog.exe /remote'. At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Browse...'.</p>
5	<p>Choose "Network Connection" And choose PC's name. Click "Connect..." button</p>	
6	<p>The MT600 connect to PC via Ethernet.</p>	 <p>The screenshot shows a 'Connection Status' dialog box. The title bar is blue with the text 'Connection Status' and a close button. The main text area says 'Connected, up-to-date'. Below this is an empty text input field. Underneath is a checkbox labeled 'Disconnect when complete', which is currently unchecked. At the bottom are two buttons: 'Sync Now' and 'Disconnect'.</p>