



Via monte Nero, 40/B - 21049 TRADATE (VA) ITALY

Phone: +39 (0)331841070 Fax:+39 (0)331841950 - e-mail:datexel@datexel.it - www.datexel.it

•FEATURES

- •N.1 serial interface RS-485 Modbus RTU Master
- •N.1 serial interface RS-485/232 Modbus RTU Slave
- •N.1 slot for microSD card
- •Interface Ethernet 10Base-T, Modbus TCP
- •N.4 Digital Inputs + N.2 SPDT Relays
- Functional Block programming software
- Remotely programmable
- Connection by removable screw-terminals
- •LED signalling for Link/Act Ethernet, serial RX-TX, power supply
- ·LED signalling for digital input and output state
- Galvanic Isolation on all the ways
- •EMC compliance CE mark
- •Suitable for DIN rail mounting in compliance with EN-50022 standard

GENERAL DESCRIPTION

The device DAT9000-DL-IO is an Intelligent unit able to control a network of slave Modbus RTU devices connected on serial line RS-485 Master executing the reading and writing of the field values and performing the logical and mathematical functions necessary for the system working, managing up to 8 task of recording memorized on files saved on the microSD card. The device is equipped with 4 digital inputs channels and 2 relay outputs. For the digital inputs, are also available 32 bit counters and the measure of the frequency up to 300 Hz.

By means of the Ethernet interface or the RS-485 "SLAVE" or RS-232 ports it is possible to read and write, in real time, the internal registers value. By Ethernet it is possible to get access to the files saved on the microSD card when the Data-Logger function is active.

Moreover, by means of the Ethernet interface, or by the RS-485 "SLAVE" or RS-232 ports it is possible to:

- Programming of the Control Logic
- Monitor, request of data, programming in real time the Intelligent Unit
- Direct programming and request of data from the Slave devices connected on the RS-485 Master.

The device DAT9000-DL-IO is configurable by the software DEV9K, an easy and intuitive free IDE developed by DATEXEL and running under Windows.

The device DAT9000-DL-IO realizes a full electrical isolation between the lines, introducing a valid protection against the effects of all ground loops eventually existing in industrial applications.

LED signalling of Ethernet activity and data rx-tx flow on the serial line allows a direct monitoring of the system functionality. The connection is made by removable screw-terminals (supply and RS-485) and RJ45 plug (Ethernet and RS-232).

The DAT9000-DL-IO is in compliance with the Directive 2004/108/EC on the electromagnetic compatibility.

The device is housed in a rough self-extinguishing plastic enclosure which, thanks to its thin profile of 22.5 mm only, allows a high density mounting on EN-50022 standard DIN rail.

LIST OF SUPPORTED FUNCTION

Communication: - Read data from "slave" devices (Modbus function 04)

- Write data to "slave" devices (Modbus function 16)

Logical: - Boolean(And, Or,)

- Compare (>, <, =,)

- Arithmetical (Sum, Subtraction, Multiplication, Division)

- Calculation (Scaling, Exponential functions, Square root extraction, Arithmetic mean,)

Digital inputs

Channels

Process: - Conditional statements (IF)

- Flow control (Goto, Call,)

FAT16 or FAT32

Scheduler: - Data-Logger

Format

For the complete list of functions and their operation, refer to the Programming software User Guide.

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

Compliant to the standard Ethernet IEEE 802.3 EIA RS485 and RS232		
Ethernet interface Protocol	Ethernet 10Base-T Modbus TCP	
RS-485 Interface Baud rate	up to 38.4 Kbps	
Max distance (1)	1.2 Km @ 38.4 Kbps	
Number of models in multipoint	32 max.	
Internal termination resistance	120 Ohm (optional)	
Compatible SD card Type Memory size	microSD Up to 8 GB	

(1) - The maximum distance depends of: number of devices

connected, type of cabling, noises, etc

Input voltage (bipole OFF state ON state	ar) 0 ÷ 3 V 10 ÷ 30 V		
Impedance Frequency	$4.7 \text{ K}\Omega$ up to 300 Hz		
Digital Outputs			
Channels	2		
Туре	SPDT relay		
Switching Power (max.) 2 A @ 250 Vac (resistive load) pe			

Switching Power (max.) 2 A @ 250 Vac (resistive load) per contact 2 A @ 30 Vdc (resistive load) per contact
Minimum load 5Vdc , 10mA

Max. voltage 250Vac (50 / 60 Hz), 30Vdc

Dielectric strength between contacts
1000 Vac. 50 Hz. 1 min

Dielectric strength between coil and contacts 4000 Vac, 50 Hz, 1 min.

Power supply	18 ÷ 30 Vdc
Current consumpt	ion 45 mA typ. @ 24Vdc(standby) 100 mA max
Isolations	

Intelligent Unit with Data-logger, Ethernet interface and digital I/O

DAT 9000-DL-IO

Power supply / Ethernet	1500 Vac, 50 Hz, 1 min.
Power supply / RS485	1500 Vac, 50 Hz, 1 min.
Ethernet / RS485	1500 Vac, 50 Hz, 1 min.
Inputs / RS485	2000 Vac, 50 Hz, 1 min.
Inputs / Power supply	2000 Vac, 50 Hz, 1 min.

ENIC (for industrial environments)			
Immunity	EN 61000-6-2		
Emission	EN 61000-6-4		

remperature & Humidity		
Operative temperature	-20 ÷ +60 °C	
Storage temperature	-40 ÷ +60 °C	
Relative humidity (not cond.)	0 ÷ 90 %	

Connections	
Ethernet	RJ-45 (on terminals side)
RS-232D	RJ-45 (on front side)
RS-485 / Supply	Removable screw terminals

Housing	
Material	Self-extinguishing plastic
Mounting	DIN rail EN-50022
Dimensions in mm.(WxHxT)	100 x 120 x 22.5
Weight	about 160 gr.

INSTALLATION INSTRUCTIONS

The Intelligent Unit DAT9000-DL-IO is suitable for fitting to DIN rails in the vertical position.

For optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and high power supply value(> 27Vdc). Make sure that sufficient air flow is provided for the device avoiding to place

raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.


Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.

MODBUS REGISTERS MAPPING

MODBUS REGISTERS MAPPING			
Register	Description	Access	
%S0	Reserved	R/W	
%S1	Firmware [0]	R	
%S2	Firmware [1]	R	
%S3	Name [0]	R/W	
%S4	Name [1]	R/W	
%S5	Port 1 [BaudRate]	R/W	
%S6	Node ID	R/W	
%S7	Port 1 [Timeout RX]	R/W	
%S8	Digital Inputs	R/W	
%S9	Digital Outputs	R/W	
%S10	System Flags	R/W	
%S11	Reserved	-	
%S12	Reserved	-	
%S13	PC	R	
%S14	Status [0]	R	
%S15	Status [1]	R	
%S16	COM Errors	R/W	
%S17	Gateway Mask [L-H]	R/W	
%S18	Port 0 [Settings]	R/W	
%S19	Port 0 [Settings]	R/W	
%S20	Timers Enable	R/W	
%S21	Reserved	-	
%R22	RTC(0)	R/W	
%R23	RTC(1)	R/W	
%R24	RTC(2)	R/W	
%R25	RTC(3)	R/W	
%R26	General		
	Purpose	R/W	
%R927	Registers		
%R928	Freq [0]	R	
%R929	Freq [1]		
%R930	Freq [2]		
%R931	Freq [3]		
%R932-933	Counter [0]	R/W	
%R934-935	Counter [1]		
%R936-937	Counter [2]		
%R938-939	Counter [3]		
%R960	Memory	R/W	
%R1023	Registers		
I		1	

MECHANICAL DIMENSIONS (mm)

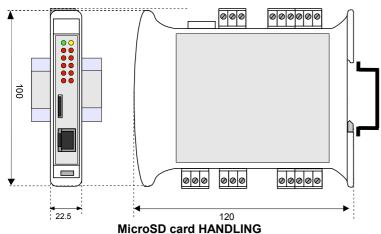

Warning: execute this operation only if necessary; to get access to the data on the card it is suggested, if possible, to use the Ethernet interface.

Insertion and removing

Power off the device.

Open the plastic door located on the front of the device.

Insert the card into the slot in the correct way and push the card to block it inside the connector; to extract the card, push slightly the card on the border to unblock the connector and pull out the card.

Close the plastic door located on the front of the device.


WIRING

SERIAL PORTS

RS-485 Slave (Port 0)


1 RS-485 0 D+ <u>(3</u>

RS-485 Master (Port 1)





RS-232D Slave (Port 0)

GND

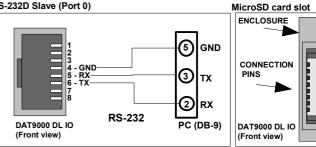



POWER SUPPLY





DIGITAL INPUTS

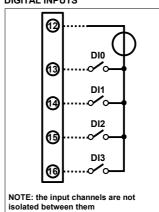

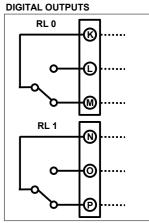

LIGHT SIGNALLING

<u>LIGHT SIGNALLING</u>			
LED	COLOR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered / Wrong RS-485 connection
STS	YELLOW	BLINK	DEBUG Modality
		OFF	RUN Modality
RX1	RED	BLINK	PORT 0 – Data received (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
TX1	RED	BLINK	PORT 0 – Data transmitted (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
RX2	RED	BLINK	PORT 1 – Data received (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
TX2	RED	BLINK	PORT 1 – Data transmitted (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
l n	RED	ON	Digital input logic state 1
		OFF	Digital input logic state 0
O n	RED	ON	Digital output logic state 1
		OFF	Digital output logic state 0

HOW TO ORDER	
" DAT9000-DL-IO "	= Requested
	= Optional