

4 ways isolated programmable signal converter / signal splitter

DAT 5022



FEATURES

- Input for voltage and current signal
- Input and output ranges configurable by DIP-switches
- Two independent output channels
- Isolated power supply source for passive current transmitter on input
- Isolated power supply source for passive loads on outputs
- Galvanic isolation at 1500 Vac between input, power supply and outputs
- Led for signalling correct power supply condition
- EMC compliant – CE mark
- DIN rail mounting in compliance with EN-50022 and EN-50035

GENERAL DESCRIPTION

The converter DAT 5022 is designed to provide on output two voltage or current signals proportional with the value of the normalised signal applied on its input. The user can program the input and outputs ranges by the proper DIP-switches available after opening the suitable door located on the side of device (see "Input ranges table" and "Outputs ranges table" sections).

On the top of device there are the led PWR to signal the correct power supply condition and the ZERO and SPAN potentiometers for the regulation of Zero and Span values.

The 1500 Vac isolation between input, power supply and the outputs eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.

The DAT 5022 provides on the input side an auxiliary supply source to connect both active and passive current loops.

Moreover it provides on each output side an auxiliary supply source to connect both active and passive loads.

It has been made in compliance with the Directive 2004/108/EC on the Electromagnetic Compatibility.

It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in according to EN-50022 and EN-50035 standards .

OPERATIVE INSTRUCTIONS

The converter DAT 5022 must be powered by a direct voltage included in the 20 V to 32 V range. The power supply must be applied between the terminals Q (+Vdc) and R (GND).

The output 1 connections must be made as shown in the section "Output 1 connections".

Voltage output: between the terminals L (Out1) and G (Out1 GND); **passive current output:** between the terminals L (Out1) and G (Out1 GND) for the sink currents; **active current output :** between the terminals I (Aux supply 1) and L (Out1) for the source currents.

The output 2 connections must be made as shown in the section "Output 2 connections".

Voltage output: between the terminals F (Out2) and H (Out2 GND); **passive current output:** between the terminals F (Out2) and H (Out2 GND) for the sink currents; **active current output :** between the terminals E (Aux supply 2) and F (Out2) for the source currents.

The input connections must be made as shown in the section "Input connections".

Voltage input: between the terminals N (Input V) and P (Input GND); **passive current input:** between the terminals O (Input I) and P (Input GND) for the sink currents; **active current input** for the source current (for example coming from a passive transmitter) : between the terminals M (Aux supply) and O (Input I).

The configuration of input and output ranges is made by DIP-switches; the output channels can be set independently (refer to the section "Input ranges table" and "Outputs ranges table").

After the converter configuration, it is necessary to calibrate it using the ZERO and SPAN regulations; this operation is illustrated in the section "DAT 5022: Configuration and calibration". To install the device refer to the section "Installation instructions".

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in nominal conditions)

INPUT	OUTPUT 1 & 2	POWER SUPPLY
Signal type (configurable) Current: 4 ÷ 20 mA, 0 ÷ 20 mA Voltage: 0÷10 V, 2÷10 V, 0÷5 V, 1÷5 V Input impedance Current: ~ 50 Ω Voltage: >/= 1 MΩ Auxiliary supply (Aux. supply) 18 Vdc min @ 20 mA	Signal type (configurable) Current: 4 ÷ 20 mA, 0 ÷ 20 mA Voltage: 0÷10 V, 2÷10 V, 0÷5 V, 1÷5 V Output adjustments Zero: ± 5 % of f.s. minimum Span: ± 5 % of f.s. minimum Output impedance Current: </= 500 Ω Voltage: >/= 5 KΩ Auxiliary supply (Aux. supply out) 12 Vdc min @ 20 mA	Power supply voltage (**) 20÷32 Vdc Current consumption @ 24 Vdc (***) Current output: 80 mA max. Voltage output: 40 mA max. Max. current consumption (***) 100 mA
	PERFORMANCES Calibration error ± 0.1 % of f.s. Linearity error (*) ± 0.05 % of f.s. Thermal drift 0.02 % of f.s./°C Response time (from 10 to 90 % of f.s.) < 10 ms	ISOLATION Isolation Voltage 1500 Vac, 50 Hz, 1 min. on all the ways
		HOUSING Material Self-extinguish plastic Operative temperature -20 ÷ 60 °C Storage temperature - 40 ÷ 85 °C Relative Humidity (not cond.) 0 ÷ 90% Mounting On DIN Rail in compliance with EN50022 and EN50035 EMC (for industrial environments) Immunity: EN 61000-6-2 Emission EN 61000-6-4 Weight approx. 90 g

DAT 5022: CONFIGURATION & CALIBRATION

- 1) Refer to the "Input ranges table", determine in the column " Input " the position of the input value.
Refer to the " Outputs ranges table " and determine in the column " Output 1 & 2 " the position of the output values.
In the correspondent lines is shown how to set the DIP-switches .
- 2) Set the DIP-switches as indicated .
- 3) Connect on input a voltage or current simulator programmed to supply the maximum and minimum values of the input range.
- 4) Set the simulator at the minimum value of the input range or regulate the potentiometer at the minimum value .
- 5) By the ZERO potentiometers calibrate the output of each channel at the minimum value .
- 6) Set the simulator at the maximum value of the input range or regulate the potentiometer at the maximum value.
- 7) By the SPAN potentiometers calibrate the output of each channel at the maximum value .
- 8) Repeat the operation from the step 4 to the step 7 until the output value will be correct (3 attempts typically required).

Configuration ex.: in: 4÷20 mA out 1: 0÷10 Vdc, out 2: 4÷20 mA.
Input switches configuration (SW1): On, Off, On, Off, On, Off.
Output 1 switches configuration (SW2): Off, On, Off, Off, Off, Off.
Output 2 switches configuration (SW3): On, Off, Off, On, On, Off.

INPUT RANGES TABLE

INPUT	SW1					
	1	2	3	4	5	6
0 ÷ 10 V		●				
2 ÷ 10 V	●					
0 ÷ 5 V		●		●		
1 ÷ 5 V	●			●		
0 ÷ 20 mA		●	●		●	
4 ÷ 20 mA	●		●		●	

OUTPUT RANGES TABLE

OUTPUT1 & 2	SW2 & SW3					
	1	2	3	4	5	6
0 ÷ 10 V		●				
2 ÷ 10 V		●		●	●	
0 ÷ 5 V		●	●			
1 ÷ 5 V		●	●	●	●	
0 ÷ 20 mA	●					
4 ÷ 20 mA	●			●	●	

● = DIP SWITCHES " ON"

INSTALLATION INSTRUCTIONS

The DAT 5022 device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:
When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and **at least one** of the overload conditions exists.
- If panel temperature exceeds 35°C and **at least two** of the overload conditions exist.
- If **all** the overload conditions exist.

Overload conditions:

- Use of input auxiliary supply (terminal M).
- Use of output 1 auxiliary supply (terminal I).
- Use of output 2 auxiliary supply (terminal E).

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.

Notice: when the voltage input (terminal N) is not used, it is suggested to not connect cable to it or connect the terminal N to the terminal P.

LIGHT SIGNALLING


LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered

ISOLATIONS STRUCTURE




DAT 5022: CONNECTIONS


INPUT CONNECTIONS

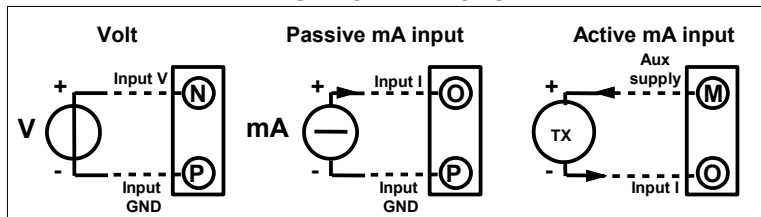


POWER SUPPLY CONNECTIONS

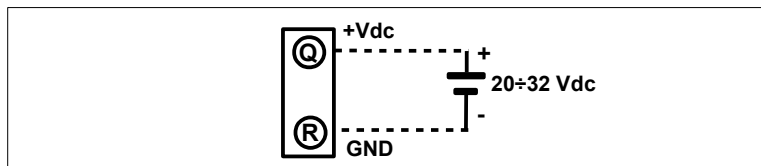


OUTPUT 1 CONNECTIONS

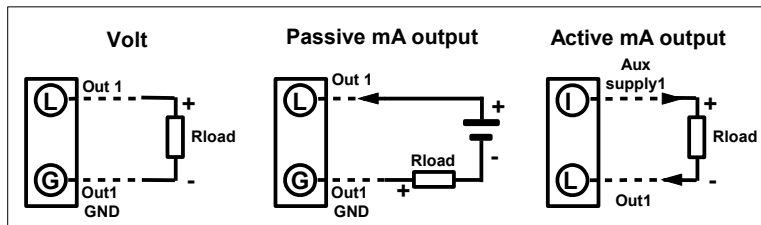


OUTPUT 2 CONNECTIONS

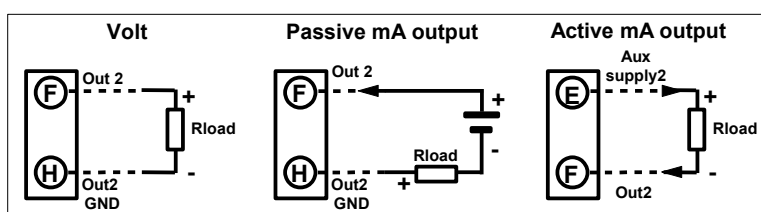

DIMENSIONS (mm) & REGULATIONS

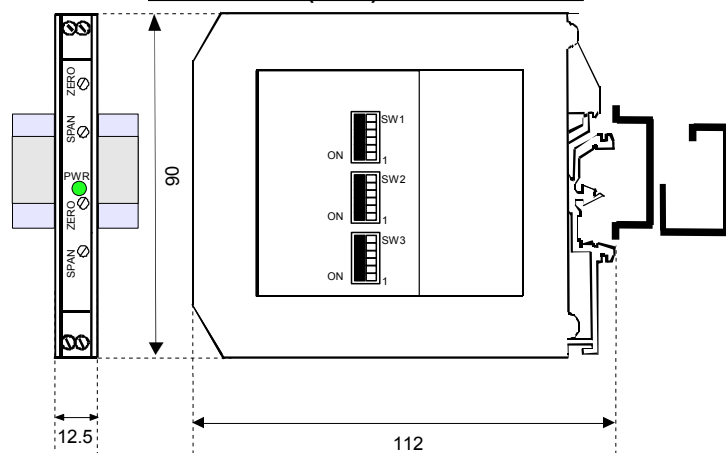

POTENTIOMETER ROTATION (OUT 1 & 2)



HOW TO ORDER

The DAT 5022 is supplied as requested on the order.
In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE: DAT 5022 [0÷10 V] - [0÷10 V] - [0÷10 V]

Input range ————
Output 1 range ————
Output 2 range ————