



INSTRUCTION MANUAL

SIL 2 Temperature Signal Converter,
And Trip Amplifiers
Din-Rail Model D1073S



Characteristics

General Description: The single channel DIN Rail Temperature Signal Converter and Trip Amplifier D1073S accepts a low level dc signal from millivolt, thermocouple or RTD temperature sensor, located in Hazardous Area, and converts, with isolation, the signal to drive a Safe Area load. Output signal can be direct or reverse. Two independent Alarm Trip Amplifiers are also provided. Each alarm energizes, or de-energizes, an SPST relay for high, low, low-startup or burnout alarm functions. The two alarm relays trip points are settable over the entire input signal range.

Function: 1 channel I.S. input from mV, thermocouples, 3-4 wires resistance thermometers, transmitting potentiometers, provides 3 port isolation (input/output/supply) and current (source mode) or voltage output signal. The programmable RTD line resistance compensation allows the use of 2 wires RTDs or error compensation for 3-4 wires RTDs.

Reference junction compensation can be automatic, with option 91, or fixed by software setting. In addition it provides two SPST relay alarm contacts with adjustable alarm trip point.

Signalling LEDs: Power supply indication (green), burnout (red), alarm A (red), alarm B (red).

Configurability: Totally software configurable, no jumpers or switches, input sensor, connection mode, burnout operation, mA or V output signal, alarm trip point, high, low, low-startup or burnout alarm mode, NE/ND relay operation, hysteresis, delay time, by GM Pocket Portable Configurator PPC1090, powered by the unit or configured by PC via RS-232 serial line with PPC1092 Adapter and SWC1090 Configurator software. A 16 characters tag can be inserted using SWC1090 Configurator software.

EMC: Fully compliant with CE marking applicable requirements.

Technical Data

Supply: 24 Vdc nom (20 to 30 Vdc) reverse polarity protected, ripple within voltage limits ≤ 5 Vpp.

Current consumption @ 24 V: 65 mA with 20 mA output and relays energized typical.

Power dissipation: 1.5 W with 24 V supply, 20 mA output and relays energized typical.

Max. power consumption: at 30 V supply voltage, overload condition, relays energized and PPC1090 connected, 2.1 W.

Isolation (Test Voltage): I.S. In/Outs 1.5 KV; I.S. In/Supply 1.5 KV; Analog Out/Supply 500 V; Analog Out/Alarm Outs 1.5 KV; Alarm Outs/Supply 1.5 KV; Alarm Out/Alarm Out 1.5 KV.

Input: millivolt or thermocouple type A1, A2, A3, B, E, J, K, L, Lr, N, R, S, S1, T, U or 3-4 wires RTD Pt100, Pt200, Pt300 to DIN43760, Pt100 (0.3916), Ni100, Ni120 or Pt500, Pt100, Pt50, Cu100, Cu53, Cu50, Cu46 (russian standard) or 3 wires transmitting potentiometer (50 Ω to 20 K Ω).

Integration time: 500 ms.

Resolution: 5 μ V on mV or thermocouple, 1 μ V thermocouple type B, R, S, S1, 2 μ V thermocouple A1, A2, A3, 20 m Ω on RTD, 0.05 % on transmitting potentiometer.

Visualization: 0.1 $^{\circ}$ C on temperature, 10 μ V on mV, 0.1 % on potentiometer.

Input range: within rated limits of sensor (-10 to + 80 mV).

Measuring RTD current: ≤ 0.5 mA.

RTD line resistance compensation: ≤ 10 Ω .

RTD line resistance error compensation: - 5 to + 20 Ω , programmable.

Thermocouple Reference Junction Compensation: automatic, by external sensor OPT91 separately ordered, or fixed programmable from - 60 to + 100 $^{\circ}$ C.

Thermocouple burnout current: ≤ 30 nA.

Burnout: enabled or disabled. Analog output can be programmed to detect burnout condition with downscale or highscale forcing. Burnout condition signalled by red front panel LED.

Alarms can be programmed to detect burnout condition.

Output: 0/4 to 20 mA, on max. 600 Ω load source mode, current limited at 22 mA or 0/1 to 5 V or 0/2 to 10 V signal, limited at 11 V.

Resolution: 2 μ A current output or 1 mV voltage output.

Transfer characteristic: linear or reverse on mV or transmitting potentiometer, temperature linear or reverse on temperature sensors.

Response time: ≤ 50 ms (10 to 90 % step change).

Output ripple: ≤ 20 mVrms on 250 Ω load.

Alarm:

Trip point range: within rated limits of input sensor (see input for step resolution).

ON-OFF delay time: 0 to 1000 s, 100 ms step, separate setting.

Hysteresis: 0 to 5 $^{\circ}$ C for temperature sensor input, 0 to 50 mV for mV input, 0 to 50 % for potentiometer input (see input for step resolution).

Output: voltage free SPST relay contact.

Contact rating: 2 A 250 Vac 500 VA, 2 A 250 Vdc 80 W (resistive load).

Performance: Ref. Conditions 24 V supply, 250 Ω load, 23 \pm 1 $^{\circ}$ C ambient temperature.

Input:

Calibration and linearity accuracy: $\leq \pm 40$ μ V on mV or thermocouple, 200 m Ω on RTD, 0.2 % on potentiometer or ± 0.05 % of input value.

Temperature influence: $\leq \pm 2$ μ V, 20 m Ω , 0.02 % or ± 0.01 % of input value for a 1 $^{\circ}$ C change.

Ref. Junction Compensation influence: $\leq \pm 1$ $^{\circ}$ C (thermocouple sensor).

Analog Output:

Calibration accuracy: $\leq \pm 0.1$ % of full scale.

Linearity error: $\leq \pm 0.05$ % of full scale.

Supply voltage influence: $\leq \pm 0.05$ % of full scale for a min to max supply change.

Load influence: $\leq \pm 0.05$ % of full scale for a 0 to 100 % load resistance change.

Temperature influence: $\leq \pm 0.01$ % on zero and span for a 1 $^{\circ}$ C change.

Compatibility:

CE CE mark compliant, conforms to 94/9/EC Atex Directive and to 2004/108/CE EMC Directive.

Environmental conditions: Operating: temperature limits -20 to + 60 $^{\circ}$ C, relative humidity max 90 % non condensing, up to 35 $^{\circ}$ C.

Storage: temperature limits - 45 to + 80 $^{\circ}$ C.

Safety Description:



II (1) G [Ex ia Ga] IIC, II (1) D [Ex ia Da] IIC, I (M1) [Ex ia Ma] II, II 3G Ex na IIC T4, [Ex ia Ga] IIC, [Ex ia Da] IIC, [Ex ia Ma] I associated electrical apparatus.

Uo/Voc = 10.8 V, Io/Isc = 9 mA, Po/Po = 24 mW at terminals 13-14-15-16.

Ui/Vmax = 18 V, Ci = 6 nF, Li = 0 nH at terminals 13-14-15-16.

Um = 250 Vrms, -20 $^{\circ}$ C \leq Ta \leq 60 $^{\circ}$ C.

Approvals: DMT 01 ATEX E 042 X conforms to EN60079-0, EN60079-11, EN60079-26, EN61241-0, EN61241-11,

IECEx BVS 07.0027X conforms to IEC60079-0, IEC60079-11, IEC60079-26, IEC61241-0, IEC61241-11, GM International CRR028 conforms to EN60079-0, EN60079-15,

UL & C-UL E222308 conforms to UL913 (Div.1), UL 60079-0 (General, All Zones), UL60079-11 (Intrinsic Safety "i" Zones 0 & 1) for UL and

CSA-C22.2 No.157-92 (Div.1), CSA-E60079-0 (General, All Zones), CSA-E60079-11 (Intrinsic Safety "i" Zones 0 & 1) for C-UL,

refer to control drawing ISM0142 for complete UL and C-UL safety and installation instructions,

FM & FM-C No. 3024643, 3029921C, conforms to Class 3600, 3610, 3611, 3810 and C22.2 No.142, C22.2 No.157, C22.2 No.213, E60079-0, E60079-11, E60079-15,

Russia according to GOST 12.2.007.0-75, R 51330.0-99, R 51330.10-99 [Exia] IIC X, Ukraine according to GOST 12.2.007.0.22782.0.22782.5 Exia IIC X,

TUV Certificate No. C-IS-204194-02, SIL 2 according to IEC 61508, IEC 61511. Please refer to Functional Safety Manual for SIL applications.

DNV and KR Type Approval Certificate for marine applications.

Mounting: T35 DIN Rail according to EN50022.

Weight: about 160 g.

Connection: by polarized plug-in disconnect screw terminal blocks to accommodate terminations up to 2.5 mm².

Location: Safe Area/Non Hazardous Locations or Zone 2, Group IIC T4, Class I, Division 2, Groups A, B, C, D Temperature Code T4 and Class I, Zone 2, Group IIC, IIB, IIA

T4 installation.

Protection class: IP 20.

Dimensions: Width 22.5 mm, Depth 99 mm, Height 114.5 mm.

Ordering information


| | | | |
|---|--------|--|--|
| Model: | D1073S | | |
| Power Bus enclosure | /B | | |
| Reference Junction Compensator (TC input) OPT91 | | | |

Operating parameters are programmable by the GM Pocket Portable Configurator PPC1090 or via RS-232 serial line with PPC1092 Adapter and SWC1090 Configurator software. If the parameters are provided with the purchasing order the unit will be configured accordingly, otherwise the unit will be supplied with default parameters.

NOTE: for thermocouple sensor input, the Reference Junction Compensator is required for automatic ambient temperature compensation.


It has to be ordered as OPT91, it will be supplied separately and it has to be connected to the input terminal blocks as indicated in the function diagram.

Front Panel and Features

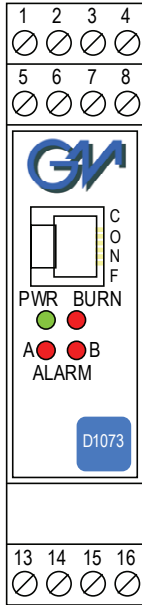

- SIL 2 according to IEC 61508, IEC 61511 using analog output or trip amplifiers for Tproof = 3 / 6 years (10 / 20 % of total SIF).
- PFDavg (1 year) 3.33 E-04, SFF 83.9 % using analog output.
- PFDavg (1 year) 2.85 E-04, SFF 88.7 % using trip amplifiers.
- Input from Zone 0 (Zone 20), Division 1, installation in Zone 2, Division 2.
- mV, thermocouples, RTD or transmitting potentiometers Input Signal.
- Programmable RTD line resistance compensation.
- Reference Junction Compensation automatic or fixed (programmable value).
- 0/4-20 mA, 0/1-5 V, 0/2-10 V Output Signal temperature linear or reverse.
- 16 characters tag.
- Two independent trip amplifiers.
- Output for burnout detection.
- Common burnout detection available when using Power Bus enclosure.
- High Accuracy, μ P controlled A/D converter.
- Three port isolation, Input/Output/Supply.
- EMC Compatibility to EN61000-6-2, EN61000-6-4.
- Fully programmable operating parameters.
- ATEX, IECEx, UL & C-UL, FM & FM-C, Russian and Ukrainian Certifications.
- Type Approval Certificate DNV and KR for marine applications.
- Simplified installation using standard DIN Rail and plug-in terminal blocks.
- 250 Vrms (Um) max. voltage allowed to the instruments associated with the barrier.

Terminal block connections

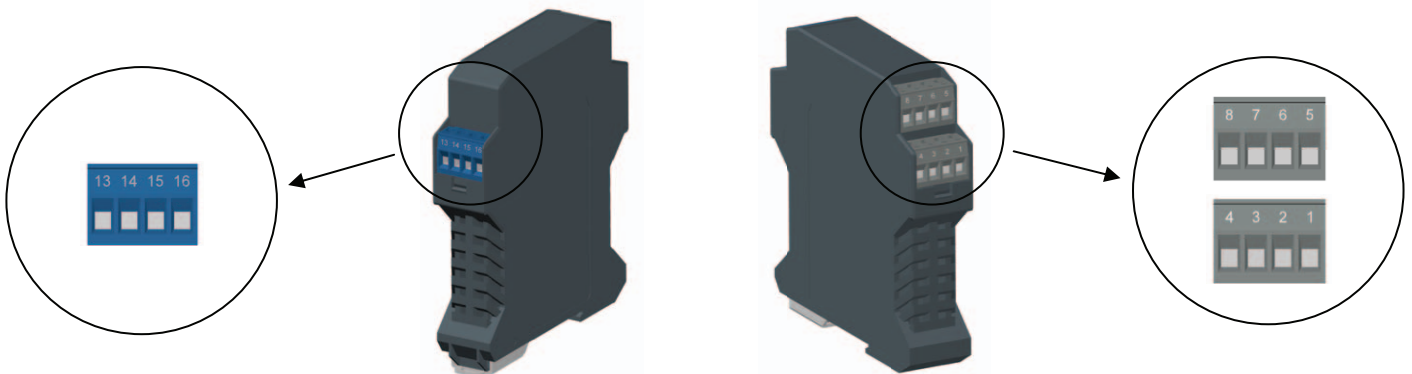

HAZARDOUS AREA

| | |
|-----------|---|
| 13 | Input Ch 1 for Reference Junction Compensator Option 91 or Input Ch 1 for 3-4 wire RTD or potentiometer |
| 14 | Input Ch 1 for 3-4 wire RTD |
| 15 | + Input Ch 1 for thermocouple TC or Input Ch 1 for 4 wire RTD or potentiometer |
| 16 | Input Ch 1 for thermocouple TC or Input Ch 1 for 3-4 wire RTD or potentiometer |

SAFE AREA

| | |
|----------|---|
| 1 | + Output Ch 1 for Current Source mode or + Output Ch 1 for Voltage Source mode |
| 2 | - Output Ch 1 for Current Source mode or - Output Ch 1 for Voltage Source mode |
| 3 | + Power Supply 24 Vdc |
| 4 | - Power Supply 24 Vdc |
| 5 | Alarm A |
| 6 | Alarm A |
| 7 | Alarm B |
| 8 | Alarm B |

Parameters Table

In the system safety analysis, always check the Hazardous Area/Hazardous Locations devices to conform with the related system documentation, if the device is Intrinsically Safe check its suitability for the Hazardous Area/Hazardous Locations and gas group encountered and that its maximum allowable voltage, current, power (U_i/V_{max} , I_i/I_{max} , P_i/P_i) are not exceeded by the safety parameters (U_o/V_{oc} , I_o/I_{sc} , P_o/P_o) of the D1073 Associated Apparatus connected to it. Also consider the maximum operating temperature of the field device, check that added connecting cable and field device capacitance and inductance do not exceed the limits (C_o/C_a , L_o/L_a , L_o/R_o) given in the Associated Apparatus parameters for the effective gas group. See parameters on enclosure side and the ones indicated in the table below:

| D1073 Terminals | | D1073 Associated Apparatus Parameters | Must be | Hazardous Area/ Hazardous Locations Device Parameters |
|-----------------|-------------------|--|---------|---|
| Ch1 | 13 - 14 - 15 - 16 | $U_o / V_{oc} = 10.8 \text{ V}$ | \leq | U_i / V_{max} |
| Ch1 | 13 - 14 - 15 - 16 | $I_o / I_{sc} = 9 \text{ mA}$ | \leq | I_i / I_{max} |
| Ch1 | 13 - 14 - 15 - 16 | $P_o / P_o = 24 \text{ mW}$ | \leq | P_i / P_i |
| D1073 Terminals | | D1073 Associated Apparatus Parameters | Must be | Hazardous Area/ Hazardous Locations Device + Cable Parameters |
| Ch1 | 13 - 14 - 15 - 16 | $C_o / C_a = 2.134 \mu\text{F}$ (IIC-A, B) | \geq | C_i / C_i device + C cable |
| | | $C_o / C_a = 14.994 \mu\text{F}$ (IIB-C) | | |
| | | $C_o / C_a = 65.994 \mu\text{F}$ (IIA-D) | | |
| Ch1 | 13 - 14 - 15 - 16 | $L_o / L_a = 468 \text{ mH}$ (IIC-A, B) | \geq | L_i / L_i device + L cable |
| | | $L_o / L_a = 1874 \text{ mH}$ (IIB-C) | | |
| | | $L_o / L_a = 3749 \text{ mH}$ (IIA-D) | | |
| Ch1 | 13 - 14 - 15 - 16 | $L_o / R_o = 1510 \mu\text{H}/\Omega$ (IIC-A, B) | \geq | L_i / R_i device and L cable / R cable |
| | | $L_o / R_o = 6050 \mu\text{H}/\Omega$ (IIB-C) | | |
| | | $L_o / R_o = 12100 \mu\text{H}/\Omega$ (IIA-D) | | |

NOTE for USA and Canada:
 IIC equal to Gas Groups A, B, C, D, E, F and G
 IIB equal to Gas Groups C, D, E, F and G
 IIA equal to Gas Groups D, E, F and G

When used with separate powered intrinsically safe devices, check that maximum allowable voltage (U_i/V_{max}) of the D1073 Associated Apparatus are not exceeded by the safety parameters (U_o/V_{oc}) of the Intrinsically Safe device, indicated in the table below:

| D1073 Terminals | | D1073 Associated Apparatus Parameters | Must be | Hazardous Area/ Hazardous Locations Device Parameters |
|-----------------|-------------------|---|---------|---|
| Ch1 | 13 - 14 - 15 - 16 | $U_i / V_{max} = 18 \text{ V}$ | \geq | U_o / V_{oc} |
| Ch1 | 13 - 14 - 15 - 16 | $C_i = 6 \text{ nF}$, $L_i = 0 \text{ nH}$ | | |

For installations in which both the C_i and L_i of the Intrinsically Safe apparatus exceed 1 % of the C_o and L_o parameters of the Associated Apparatus (excluding the cable), then 50 % of C_o and L_o parameters are applicable and shall not be exceeded (50 % of the C_o and L_o become the limits which must include the cable such that C_i device + C cable \leq 50 % of C_o and L_i device + L cable \leq 50 % of L_o).

If the cable parameters are unknown, the following value may be used: Capacitance 60pF per foot (180pF per meter), inductance 0.20 μH per foot (0.60 μH per meter).

The Intrinsic Safety Entity Concept allows the interconnection of Intrinsically Safe devices approved with entity parameters not specifically examined in combination as a system when the above conditions are respected.

For Division 1 and Zone 0 installations, the configuration of Intrinsically Safe Equipment must be FM approved under Entity Concept (or third party approved);


for Division 2 installations, the configuration of Intrinsically Safe Equipment must be FM approved under non-incendive field wiring or Entity Concept (or third party approved).

Function Diagram


HAZARDOUS AREA ZONE 0 (ZONE 20) GROUP IIC,
HAZARDOUS LOCATIONS CLASS I, DIVISION 1, GROUPS A, B, C, D,
CLASS II, DIVISION 1, GROUPS E, F, G, CLASS III, DIVISION 1,
CLASS I, ZONE 0, GROUP IIC

SAFE AREA, ZONE 2 GROUP IIC T4,
NON HAZARDOUS LOCATIONS, CLASS I, DIVISION 2,
GROUPS A, B, C, D T-Code T4, CLASS I, ZONE 2, GROUP IIC T4

MODEL D1073S

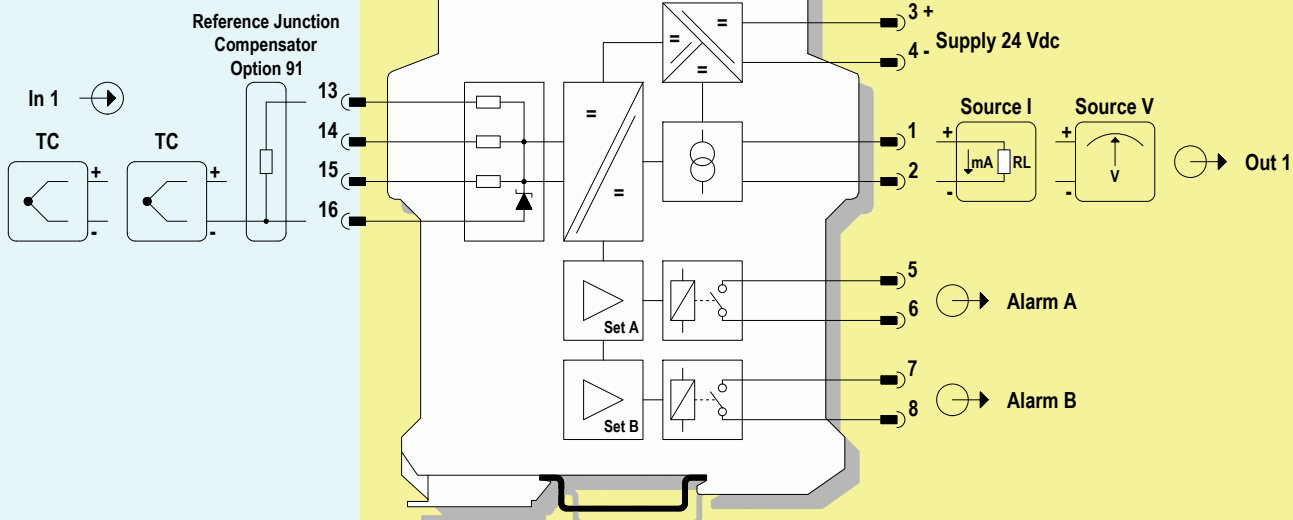


MODEL D1073S

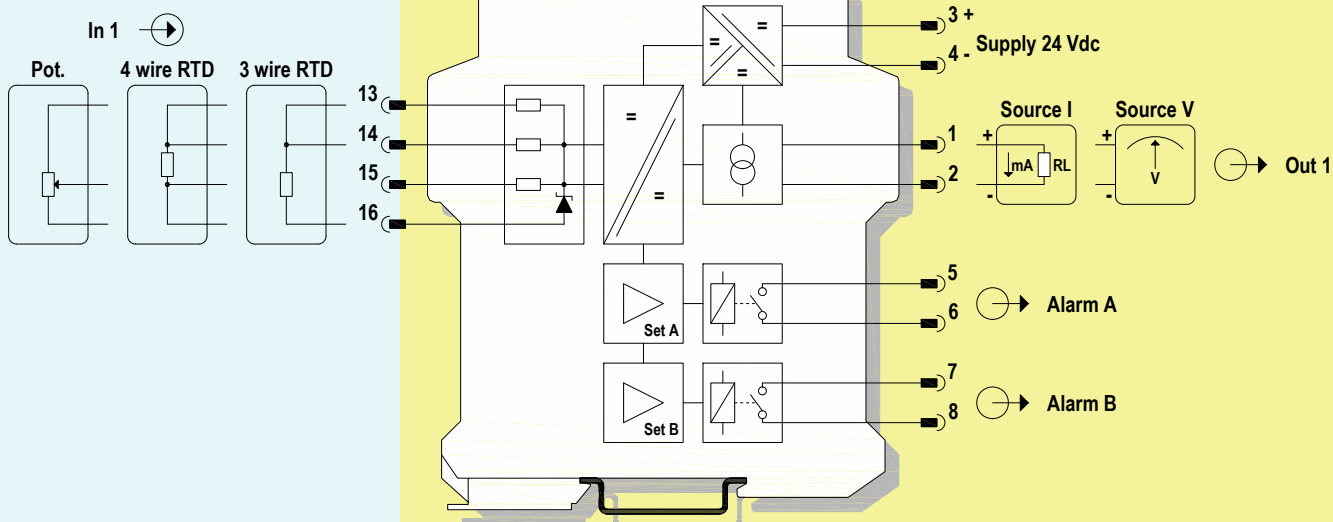

For SIL applications, alarm contacts must be used in series with equal configuration. Relay contact shown in de-energized position

Warning

D1073 is an isolated Intrinsically Safe Associated Apparatus installed into standard EN50022 T35 DIN Rail located in Safe Area/Non Hazardous Locations or Zone 2, Group IIC, Temperature Classification T4, Class I, Division 2, Groups A, B, C, D, Temperature Code T4 and Class I, Zone 2, Group IIC, IIB, IIA Temperature Code T4 Hazardous Area/Hazardous Locations (according to EN/IEC60079-15, FM Class No. 3611, CSA-C22.2 No. 213-M1987, CSA-E60079-15) within the specified operating temperature limits Tamb -20 to +60 °C, and connected to equipment with a maximum limit for AC power supply Um of 250 Vrms.

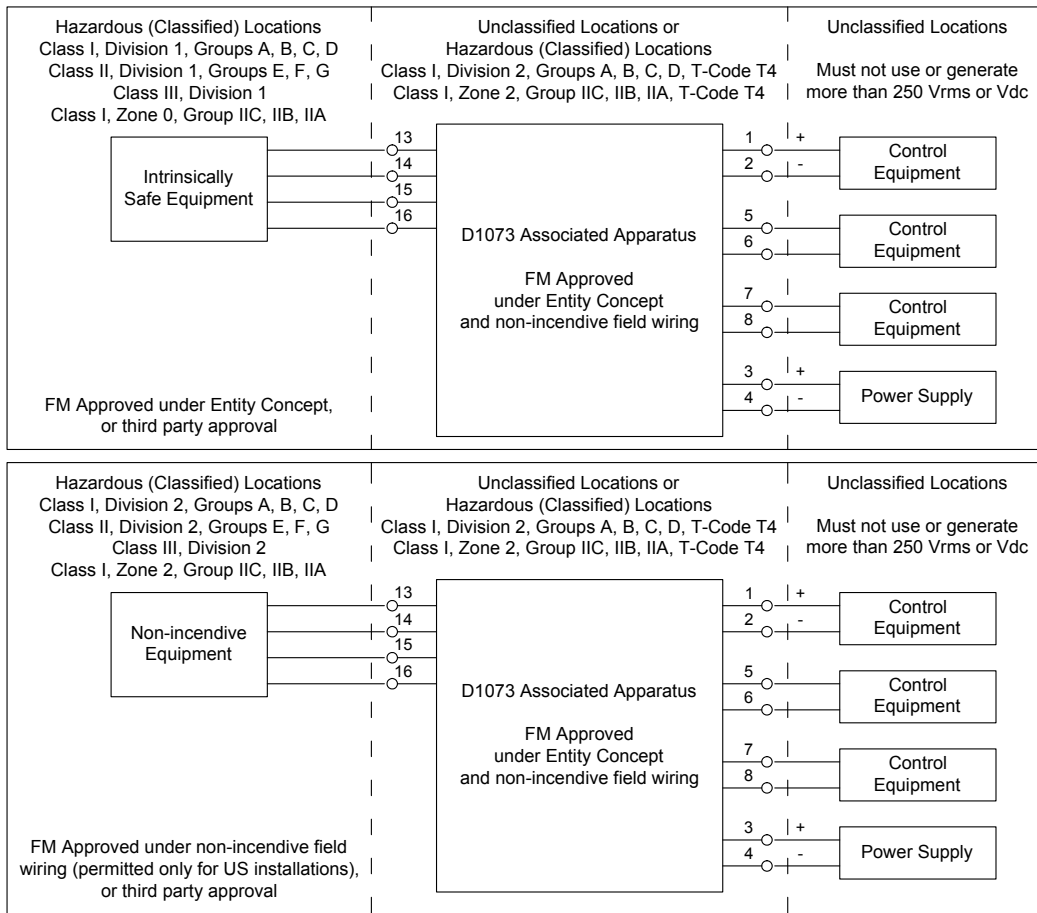

Non-incendive field wiring is not recognized by the Canadian Electrical Code, installation is permitted in the US only.

For installation of the unit in a Class I, Division 2 or Class I, Zone 2 location, the wiring between the control equipment and the D1073 associated apparatus shall be accomplished via conduit connections or another acceptable Division 2, Zone 2 wiring method according to the NEC and the CEC.

Not to be connected to control equipment that uses or generates more than 250 Vrms or Vdc with respect to earth ground.

D1073 must be installed, operated and maintained only by qualified personnel, in accordance to the relevant national/international installation standards

(e.g. IEC/EN60079-14 Electrical apparatus for explosive gas atmospheres - Part 14: Electrical installations in hazardous areas (other than mines), BS 5345 Pt4, VDE 165, ANSI/ISA RP12.06.01 Installation of Intrinsically Safe System for Hazardous (Classified) Locations, National Electrical Code NEC ANSI/NFPA 70 Section 504 and 505, Canadian Electrical Code CEC) following the established installation rules, particular care shall be given to segregation and clear identification of I.S. conductors from non I.S. ones.

De-energize power source (turn off power supply voltage) before plug or unplug the terminal blocks when installed in Hazardous Area/Hazardous Locations or unless area is known to be nonhazardous. **Warning: substitution of components may impair Intrinsic Safety and suitability for Division 2, Zone 2.**

Warning: de-energize main power source (turn off power supply voltage) and disconnect plug-in terminal blocks before opening the enclosure to avoid electrical shock when connected to live hazardous potential.

Explosion Hazard: to prevent ignition of flammable or combustible atmospheres, disconnect power before servicing or unless area is known to be nonhazardous.

Failure to properly installation or use of the equipment may risk to damage the unit or severe personal injury.

The unit cannot be repaired by the end user and must be returned to the manufacturer or his authorized representative. Any unauthorized modification must be avoided.

Operation

Input channel of D1073 accepts a signal from Hazardous Area/Hazardous Locations (thermocouple, resistance thermometer, transmitting potentiometer) and converts the signal to a 0/4-20 mA or 0/1-5 V or 0/2-10 V floating output to drive a load in Safe Area/Non Hazardous Locations. In addition to the analog output the barrier has also a two channel trip amplifiers providing two relay SPST contacts, alarm A and B, that can be configured as HIGH, LOW, LOW start-up, BURNOUT alarm operating mode and NE or ND relay operating mode. Presence of supply power is displayed by a green signaling LED, status of alarm output A and B is displayed by two red LED, integrity of field sensor and connecting line can be monitored by a configurable burnout circuit which, if enabled, can drive output signal to upscale or downscale limit. Burnout detection is also signaled by a red LED on the front panel and by an optocoupled transistor in common with power supply.

Installation

D1073 is a temperature signal converter and trip amplifiers housed in a plastic enclosure suitable for installation on T35 DIN Rail according to EN50022.

D1073 unit can be mounted with any orientation over the entire ambient temperature range, see section "Installation in Cabinet" and "Installation of Electronic Equipments in Cabinet" Instruction Manual D1000 series for detailed instructions.

D1073 temperature signal converter operates at low level measuring signals, for best performance, install it far from heat sources (heat dissipating equipment) and wide temperature excursions, in example at the bottom of a cabinet with heat dissipating equipment, if any, at the top.

Electrical connection of conductors up to 2.5 mm² are accommodated by polarized plug-in removable screw terminal blocks which can be plugged in/out into a powered unit without suffering or causing any damage **(for Zone 2 or Division 2 installations check the area to be nonhazardous before servicing)**.

The wiring cables have to be proportionate in base to the current and the length of the cable.

On the section "Function Diagram" and enclosure side a block diagram identifies all connections.

Identify the function and location of each connection terminal using the wiring diagram on the corresponding section, as an example:

Connect 24 Vdc power supply positive at terminal "3" and negative at terminal "4".

Connect positive output of analog channel at terminal "1" and negative output at "2".

Connect trip amplifier output of alarm A at terminal "5" and "6" and trip amplifier output of alarm B at terminal "7" and "8".

For a thermocouple temperature input, connect thermocouple positive extension wire at terminal "15", negative and shield (if any) at terminal "16".

Make sure that compensating wires have the correct metal and thermal e.m.f. and are connected to the appropriate thermocouple terminal, note that a wrong compensating cable type or a swapped connection is not immediately apparent but introduces a misleading measurement error that appears as a temperature drift. For a 3 wires thermoresistance temperature input connect thermometer wire A at terminal "16", B and C interconnected wires at "14" and "13".

Note that for a correct line resistance compensation in case of 3 wire sensor, wire A and B should have the same resistance.

Intrinsically Safe conductors must be identified and segregated from non I.S. and wired in accordance to the relevant national/international installation standards

(e.g. EN/IEC60079-14 Electrical apparatus for explosive gas atmospheres - Part 14: Electrical installations in hazardous areas (other than mines), BS 5345 Pt4, VDE 165, ANSI/ISA RP12.06.01 Installation of Intrinsically Safe System for Hazardous (Classified) Locations, National Electrical Code NEC ANSI/NFPA 70 Section 504 and 505, Canadian Electrical Code CEC), make sure that conductors are well isolated from each other and do not produce any unintentional connection.

Connect SPST alarm contacts checking the load rating to be within the contact maximum rating (2 A, 250 V, 500 VA 80 W resistive load).

The enclosure provides, according to EN60529, an IP20 minimum degree of mechanical protection (or similar to NEMA Standard 250 type 1) for indoor installation, outdoor installation requires an additional enclosure with higher degree of protection (i.e. IP54 to IP65 or NEMA type 12-13) consistent with the effective operating environment of the specific installation.

Units must be protected against dirt, dust, extreme mechanical (e.g. vibration, impact and shock) and thermal stress, and casual contacts.

If enclosure needs to be cleaned use only a cloth lightly moistened by a mixture of detergent in water.

Electrostatic Hazard: to avoid electrostatic hazard, the enclosure of D1073 must be cleaned only with a damp or antistatic cloth.

Any penetration of cleaning liquid must be avoided to prevent damage to the unit. Any unauthorized card modification must be avoided.

According to EN61010, D1073 series must be connected to SELV or SELV-E supplies.

Relay output contact must be connected to loads non exceeding category I, pollution degree I overvoltage limits.

Warning: de-energize main power source (turn off power supply voltage) and disconnect plug-in terminal blocks before opening the enclosure to avoid electrical shock when connected to live hazardous potential.

Start-up

Before powering the unit check that all wires are properly connected, particularly supply conductors and their polarity, input and output wires, also check that Intrinsically Safe conductors and cable trays are segregated (no direct contacts with other non I.S. conductors) and identified either by color coding, preferably blue, or by marking. Check conductors for exposed wires that could touch each other causing dangerous unwanted shorts. Turn on power, the "power on" green led must be lit, output signal should be corresponding to the input from the sensor, alarm LED should reflect the input variable condition with respect to trip points setting. If possible change the transmitter output and check the corresponding Safe Area output.

Power Dissipation of D1073 Isolators




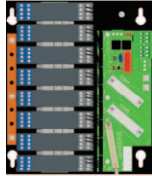
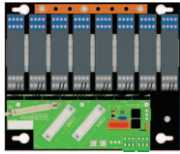
Section "Technical Data" of D1073 isolator specifies the current consumption (maximum current from the nominal power supply, typical 24 Vdc, in normal operation); this data serves to dimension the current rating of the power supply unit. Section "Technical Data" indicates also the maximum power consumption (maximum power required from the power supply in the worst (abnormal) operating conditions like for example supply voltage at 30 Vdc, short circuit on the outputs and on the inputs terminals.

The power dissipated P_d inside the enclosure for analog signal isolators is: $P_d = \text{Current Consumption (A)} * \text{Supply Voltage (V)} - \text{Power Dissipated into the input/output loads}$

Analog signal isolators have higher dissipation than digital signal isolators. In analog signal isolators each transmitter requires and dissipates $15\text{ V} * 0.02\text{ A} = 0.3\text{ W}$. Usually the loads outside the isolator dissipate 1/3 of the total power used. Isolators are not running at the maximum current all at the same time, the average power consumption of a multitude of isolators can be considered to be only 70 % of the value obtained from the section "Technical Data". Considering the 1/3 load power and the 70 % above discussed, the power effectively dissipated internally by the isolators can therefore become 1/2 of the actual power delivered by the power supply. Digital barriers dissipate all the supply power inside the enclosure consequently the total power dissipation into a cabinet, with mixed analog and digital barriers, is determined by the number of channels more than by the number of isolator enclosures. The following tables give advises for the DIN rail orientation (vertical or horizontal) of the barriers mounting, D1073S (single channel) isolators, installed on DIN rail, bus or custom board assembly.




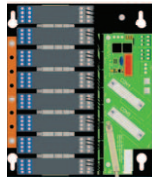
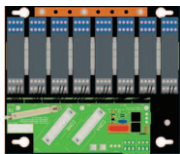
A) Cabinet with Natural Ventilation

Maximum recommended ambient temperature in °C depending on barrier type and installation method:

| Type of Isolator | Single unit Installation | Installation of Multiple units with DIN-rail Bus | | Installation on Custom Boards | |
|------------------|---|---|---|---|---|
| | Any orientation | Vertical | Horizontal | Vertical | Horizontal |
| |  |  |  |  |  |
| D1073S | 60°C | 30°C | 35°C | 35°C | 40°C |

B) Cabinet with Forced Ventilation

Maximum recommended ambient temperature in °C depending on barrier type and installation method:

| Type of Isolator | Single unit Installation | Installation of Multiple units with DIN-rail Bus | | Installation on Custom Boards | |
|------------------|---|---|---|---|---|
| | Any orientation | Vertical | Horizontal | Vertical | Horizontal |
| |  |  |  |  |  |
| D1073S | 60°C | 40°C | 45°C | 45°C | 50°C |


The Pocket Portable Configurator type PPC1090 is suitable to configure the "smart" barrier of D1000 series. The PPC1090 unit is not ATEX, UL or FM approved and is only to be used in Safe Area/Non Hazardous Locations and prior to installation of the isolator and prior to connection of any I.S. wiring. Do not use PPC1090 configurator in Hazardous Area/Hazardous Locations. The PPC1090 configurator is powered by the unit (no battery power) when the telephone jack is plugged into the barrier (RJ12 6 poles connection type with 1:1 connection). It has a 5 digit display, 4 leds and four push buttons with a menu driven configuration software and can be used in Safe Area/Non Hazardous Locations without any certification because it plugs into the non intrinsically safe portion of circuit.

PPC1090 Configuration

The configuration procedure follows a unit specific menu. The display shows the actual menu item, the led shows the channel configured and the push button actuates as "Enter", "Select", "Down" and "Up" key. The "Enter" key is pressed to confirm the menu item, the "Select" key is pressed to scroll the menu item, the "Down" and "Up" keys are pressed to decrement or increment the numeric value of menu item. The "Up" key is also pressed to decrement the menu level. When the PPC1090 is plugged into the unit, the display shows the barrier model (first level menu). Then press the "Enter" key to the second level menu and the "Select" key to scroll the menu voice. When the selected menu item is displayed press the "Enter" key to confirm the choice. Follow this procedure for every voice of the menu. When a numeric menu item is to be changed, press the "Select" key to highlight the character and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. To return to a higher level menu press the "Up" key.

D1073S Menu

Menu item description


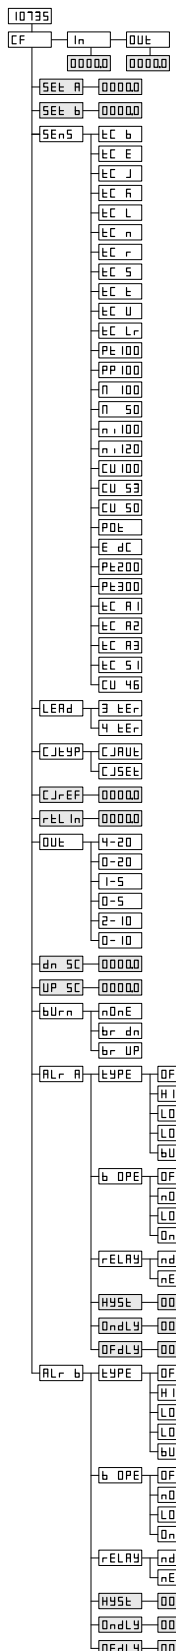


- 1) **D1073S** [1 Level Menu]
Displays Model D1073S single channel temperature signal converter and trip amplifiers. Press "Enter" key to second level menu.
- 2) **CF** [2 Level Menu]
Displays the parameters configuration menu. Press "Enter" key to configure the functional parameters, press the "Select" key to the next menu level item or "Up" key to return to first level.
- 3) **In** [2 Level Menu]
Displays the input variable monitoring. Press "Enter" to display the current input value reading, press the "Select" key to the next menu level item or "Up" key to return to first level.
- 4) **Out** [2 Level Menu]
Displays the analog output variable monitoring. Press "Enter" to display the current output value reading, press the "Select" key to the next menu level item or "Up" key to return to first level.
- 5) **Set A** [3 Level Menu]
Displays the SET A Trip Point Value configuration. Press "Enter" to set the trip point value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the set value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key
- 6) **Set B** [3 Level Menu]
Displays the SET B Trip Point Value configuration. Press "Enter" to set the trip point value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the set value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key
- 7) **Sens** [3 Level Menu]
Displays the input sensor type configuration. Press "Enter" to set the input sensor, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can choose between 26 different sensors; press "Select" key to change the input sensor and then the "Enter" key to confirm the choice. The input sensors are:
 - Tc B Thermocouple type B, -10 to +1800°C range
 - Tc E Thermocouple type E, -250 to +1000°C range
 - Tc J Thermocouple type J, -200 to +750°C range
 - Tc K Thermocouple type K, -250 to +1350°C range
 - Tc L Thermocouple type L, -200 to +800°C range
 - Tc N Thermocouple type N, -200 to +1300°C range
 - Tc R Thermocouple type R, -50 to +1750°C range
 - Tc S Thermocouple type S, -50 to +1750°C range
 - Tc T Thermocouple type T, -250 to +400°C range
 - Tc U Thermocouple type U, -200 to +400°C range
 - Tc LR Thermocouple type LR (russian standard), -200 to +800°C range
 - Pt 100 Thermoresistance Pt 100 Ω with 0.385 coefficient, -200 to +850°C range
 - PP 100 Thermoresistance Pt 100 Ω with 0.392 coefficient, -200 to +625°C range
 - M 100 Thermoresistance Pt 100 Ω with 0.391 coefficient (russian standard), -200 to +650°C range
 - M 50 Thermoresistance Pt 50 Ω with 0.391 coefficient (russian standard), -200 to +650°C range
 - Ni 100 Thermoresistance Ni 100 Ω, -50 to +180°C range
 - Ni 120 Thermoresistance Ni 120 Ω, (russian standard), -75 to +300°C range
 - CU 100 Thermoresistance Copper 100 Ω (russian standard), -50 to +200°C range
 - CU 53 Thermoresistance Copper 53 Ω (russian standard), -50 to +180°C range
 - CU 50 Thermoresistance Copper 50 Ω (russian standard), -50 to +200°C range
 - Pot Potentiometer, 0 to 100% range
 - E dc mV dc input from externally powered transmitter, -20 to +85mV range
 - Pt 200 Thermoresistance Pt 200 Ω with 0.385 coefficient, -150 to +400°C range
 - Pt 300 Thermoresistance Pt 300 Ω with 0.385 coefficient, -150 to +250°C range
 - Tc A1 Thermocouple type A1 (russian standard), -10 to +2500°C range
 - Tc A2 Thermocouple type A2 (russian standard), -10 to +1800°C range
 - Tc A3 Thermocouple type A3 (russian standard), -10 to +1800°C range
 - Tc S1 Thermocouple type S (russian standard), -50 to +1600°C range
 - CU 46 Thermoresistance Copper 46 Ω (russian standard), -200 to +650°C range
- 8) **Lead** [3 Level Menu]
Displays the input sensor connection type configuration for thermoresistance sensor. Press "Enter" to set the input connection type, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can choose between 2 different sensor connection; press "Select" key to change the input connection and then the "Enter" key to confirm the choice. The input connection types are:
 - 3 ter 3 wire connection type thermoresistance
 - 4 ter 4 wire connection type thermoresistance
- 9) **CJ Typ** [3 Level Menu]
Displays the reference junction compensation type configuration for thermocouple sensor. Press "Enter" to set the input compensation type, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can choose between 2 different sensor compensation types; press "Select" key to change the type and then the "Enter" key to confirm the choice.

The input compensation types are:

 - CJ Aut automatic compensation of ambient temperature (via option 91 thermoresistance sensor)
 - CJ Set fixed ambient temperature compensation, value is settled by CJ Ref menu item (do not require option 91 thermoresistance sensor)

- 10) **CJ Ref** [3 Level Menu]
Displays the ambient temperature compensation value configuration for thermocouple sensor. Press "Enter" to set the value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the compensation value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable from -60 to +100 °C
- 11) **Rt Lin** [3 Level Menu]
Displays the thermoresistance compensation value configuration for thermoresistance sensor. Press "Enter" to set the value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the compensation value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable from -5 to +20 Ω
- 12) **Out** [3 Level Menu]
Displays the analog output type configuration. Press "Enter" to set the analog output type and range, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can choose between 6 different output types; press "Select" key to change the output type and range and then the "Enter" key to confirm the choice. The output types are:
4-20 4 to 20 mA current output
0-20 0 to 20 mA current output
1-5 1 to 5 V voltage output
0-5 0 to 5 V voltage output
2-10 2 to 10 V voltage output
0-10 0 to 10 V voltage output
- 13) **Dn Sc** [3 Level Menu]
Displays the input low scale configuration. Press "Enter" to set the low scale input value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the low input value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable over the entire range of the sensor as specified.
- 14) **Up Sc** [3 Level Menu]
Displays the input high scale configuration. Press "Enter" to set the high scale input value, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can set the high input value; press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable over the entire range of the sensor as specified.
- 15) **Burn** [3 Level Menu]
Displays the burnout configuration. Press "Enter" to set the burnout condition, press the "Select" key to the next menu level item or "Up" key to return to second level. If you pressed "Enter" key, you can choose between 3 different burnout conditions; press "Select" key to change the burnout and then the "Enter" key to confirm the choice. The condition types are:
none no burnout detection, the analog output follows the input value
br dn when in burnout condition, the analog output goes to down scale (0 mA or 0 V)
br up when in burnout condition, the analog output goes to high scale (22 mA or 11 V)
- 16) **Alr A / Alr B** [3 Level Menu]
Displays the Alarm A / Alarm B configuration menu. Press "Enter" to set the alarm condition, press the "Select" key to the next menu level item or "Up" key to return to second level.
- 17) **Type** [4 Level Menu]
Displays the alarm type (A or B) configuration. Press "Enter" to set the alarm condition, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can choose between 5 different alarm conditions; press "Select" key to change the type and then the "Enter" key to confirm the choice. The condition types are:
OFF no alarm detection, the relay output is always in normal condition
HI high alarm condition, the relay output change status when an alarm condition is detected (input variable goes above the set value)
LO low alarm condition, the relay output change status when an alarm condition is detected (input variable goes below the set value)
LOSEC low with start-up alarm condition, the relay output change status when an alarm condition after the start-up is detected (input variable starts below the set value but no alarm condition is signaled, after the warm-up the variable goes above the set value arming the alarm detection, then when the variable goes below the set value the alarm condition is signaled)
BURN burnout alarm condition, the alarm condition change status when a burnout condition appear in the input sensor.
- 18) **B Ope** [4 Level Menu]
Displays the functionality of alarm in burnout condition (A or B) configuration. Press "Enter" to set the burnout alarm condition, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can choose between 4 different alarm burnout conditions; press "Select" key to change the type and then the "Enter" key to confirm the choice. The types are:
OFF the alarm goes in disabled condition when a burnout is detected
NOR the alarm follow the condition of input variable (not relevant burnout)
LOCK the alarm is locked in the same position as before a burnout is detected
ON the alarm goes in enabled condition when a burnout is detected
Note that a minimum of 1 second delay ("On dl" item) is necessary to obtain the burnout detection on alarm conditions.
- 19) **Relay** [4 Level Menu]
Displays the relay normal condition (A or B) configuration. Press "Enter" to set the relay condition, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can choose between 2 different relay conditions; press "Select" key to change the type and then the "Enter" key to confirm the choice. The condition types are:
ND relay normally de-energized (energized in alarm condition)
NE relay normally energized (de-energized in alarm condition)
- 20) **Hyst** [4 Level Menu]
Displays the alarm hysteresis value (A or B) configuration. Press "Enter" to set the deadband value, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can set the hysteresis value (engineering value); press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable from 0 to 5000 points regarding the input sensor as specified.
- 21) **On dly** [4 Level Menu]
Displays the alarm activation delay (A or B) configuration. Press "Enter" to set the delay time value, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can set the delay value (100 ms step); press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable from 0 to 1000 seconds in steps of 100 ms.
- 22) **OF dly** [4 Level Menu]
Displays the alarm de-activation delay (A or B) configuration. Press "Enter" to set the delay time value, press the "Select" key to the next menu level item or "Up" key to return to third level. If you pressed "Enter" key, you can set the delay value (100 ms step); press the "Select" key to highlight the character you want to change and then the "Up" and "Down" keys to select the number; confirm the modification with the "Enter" key. The value is settable from 0 to 1000 seconds in steps of 100 ms.

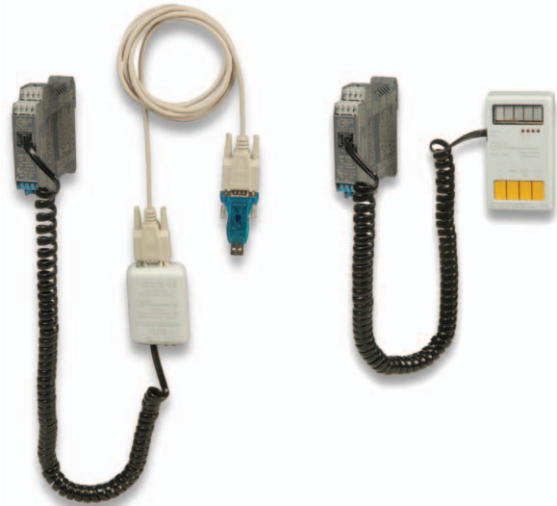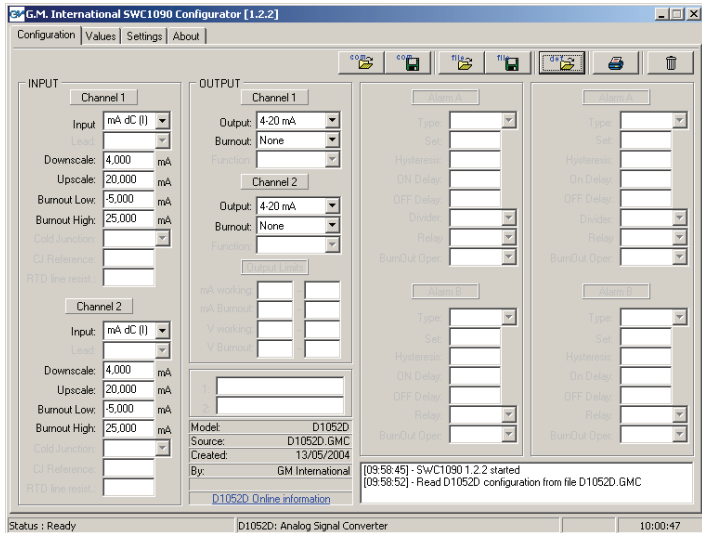

INPUT SECTION:

- Sensor:** input sensor type
- TC A1 thermocouple to ST190, GOST R.585 2001 range from -10 to +2500 °C
 - TC A2 thermocouple to ST190, GOST R.585 2001 range from -10 to +1800 °C
 - TC A3 thermocouple to ST190, GOST R.585 2001 range from -10 to +1800 °C
 - TC B thermocouple to ST190, NBS125, GOST R.585 2001 range from +50 to +1800 °C
 - TC E thermocouple to ST190, NBS125, GOST R.585 2001 range from -250 to +1000 °C
 - TC J thermocouple to ST190, NBS125, GOST R.585 2001 range from -200 to +750 °C
 - TC K thermocouple to ST190, NBS125, GOST R.585 2001 range from -250 to +1350 °C
 - TC L thermocouple to SIPT68, DIN43710 range from -200 to +800 °C
 - TC Lr thermocouple to ST190, GOST R.585 2001 range from -200 to +800 °C
 - TC N thermocouple to ST190, NBS121, GOST R.585 2001 range from -250 to +1300 °C
 - TC R thermocouple to ST190, NBS125, GOST R.585 2001 range from -50 to +1750 °C
 - TC S thermocouple to ST190, NBS125, GOST R.585 2001 range from -50 to +1750 °C
 - TC S1 thermocouple type S1 to SIPT68, russian range from -50 to +1600 °C
 - TC T thermocouple to ST190, NBS125, GOST R.585 2001 range from -250 to +400 °C
 - TC U thermocouple to SIPT68, DIN43710 range from -200 to +400 °C
 - Pt 100 C thermoresistance $\alpha=385$ to SIPT68, IEC751 range from -200 to +850 °C
 - Pt 200 C thermoresistance $\alpha=385$ to SIPT68, IEC751 range from -150 to +400 °C
 - Pt 300 C thermoresistance $\alpha=385$ to SIPT68, IEC751 range from -150 to +250 °C
 - Pp 100 C thermoresistance $\alpha=392$ to SIPT68, ANSI range from -200 to +625 °C
 - Pi 500 thermoresistance $\alpha=391$ to SIPT68, russian range from -200 to +75 °C
 - Pi 100 thermoresistance $\alpha=391$ to SIPT68, russian range from -200 to +650 °C
 - Pi 50 thermoresistance $\alpha=391$ to SIPT68, russian range from -200 to +650 °C
 - Ni 100 thermoresistance to SIPT68, DIN43760 range from -50 to +180 °C
 - Ni 120 thermoresistance $\alpha=672$ to SIPT68, russian range from -75 to +300 °C
 - Cu 100 thermoresistance to SIPT68, russian range from -50 to +200 °C
 - Cu 53 thermoresistance to SIPT68, russian range from -50 to +180 °C
 - Cu 50 thermoresistance to SIPT68, russian range from -50 to +200 °C
 - Cu 46 thermoresistance to SIPT68, russian range from -200 to +650 °C
 - Pot 3 wires transmitting potentiometer, 50 Ω to 20 K Ω , range from 0 to 100 % millivolt signal range from -20 to +85 mV
 - E DC

- Lead:** input sensor connection type (thermoresistance only)
- 3 wire 3 wires connection type
 - 4 wire 4 wires connection type
- Downscale:** input value of measuring range corresponding to defined low output value.
- Upscale:** input value of measuring range corresponding to defined high output value.
- Cold Junction:** reference junction compensation type (thermocouple only)
- Automatic ambient temperature compensation automatic by OPT91 sensor
 - Fixed programmable temperature compensation at fixed temperature
- CJ Reference:** temperature compensation value (Cold Junction type Fixed only), range from -60 to +100 °C.
- RTD line resist:** line resistance error compensation value (thermoresistance only), range from -5 to +20 Ω .

INPUT TAG SECTION:

OUTPUT SECTION:

- Output:** analog output type
- 4-20 mA current output range from 4 to 20 mA
 - 0-20 mA current output range from 0 to 20 mA
 - 1-5 V voltage output range from 1 to 5 V
 - 0-5 V voltage output range from 0 to 5 V
 - 2-10 V voltage output range from 2 to 10 V
 - 0-10 V voltage output range from 0 to 10 V
- Burnout:** analog output burnout state
- None burnout function is disabled; analog output represents the input measure as configured
 - Downscale analog output is forced at mA Burnout or V Burnout lower value
 - Upscale analog output is forced at mA Burnout or V Burnout higher value
- Output Limits:** current or voltage analog output normal working range limits or burnout detection range limits:
- mA working:** current analog output range in normal working condition.
- mA Burnout:** current analog output lower and higher value for burnout signalation.
- V working:** voltage analog output range in normal working condition.
- V Burnout:** voltage analog output lower and higher value for burnout signalation.

ALARM SECTION:

- Type:** alarm type configuration
- Off alarm functionality is disabled
 - High alarm is set to high condition, the alarm output is triggered whenever the input variable goes above the trip point value (Set)
 - Low alarm is set to low condition, the alarm output is triggered whenever the input variable goes below the trip point value (Set)
 - Low & Sec alarm is set to low condition with start-up, the alarm output is inhibited until the input variable goes above the trip point value (Set); afterwards it behaves as a Low configuration; typically used to solve start-up issues
 - Burnout a burnout condition of the input triggers the alarm output
- Set:** input value of measuring range at which the alarm output is triggered
- Hysteresis:** alarm hysteresis value, valid range: 0 to 5 °C for temperature sensor input; 0 to 50 mV for voltage input, 0 to 50 % for potentiometer input.
- ON Delay:** time for which the input variable has to be in alarm condition before the alarm output is triggered; configurable from 0 to 1000 seconds in steps of 100 ms.
- OFF Delay:** time for which the input variable has to be in normal condition before the alarm output is deactivated; configurable from 0 to 1000 seconds in steps of 100 ms.
- Relay:** relay condition
- ND the relay is in normally de-energized condition, it energizes (the output contact is closed) in alarm condition
 - NE the relay is in normally energized condition, it de-energizes (the output contact is opened) in alarm condition
- BurnOut Oper:** alarm status when a burnout condition is detected
- Nor the burnout detection on the alarm output is disabled, the alarm follows the condition of the input variable
 - Lock maintain the same alarm condition as before the burnout detection
 - On the alarm condition is activated when a burnout is detected
 - Off the alarm condition is deactivated when a burnout is detected

Each alarm output has independent configurations.